


Slot Sampler with Bottle Adapter

General

The Slot Sampler is designed to take mixed composite samples from free-flowing powders and granules. The inner tube can be removed for cleaning.

Operation

1. Insert the sampler into the product
2. Turn the handle to open the slot - the product can now be collected in the central tube
3. Turn the handle to close the slot
4. Remove the sampler
5. Invert the sampler to discharge the sample

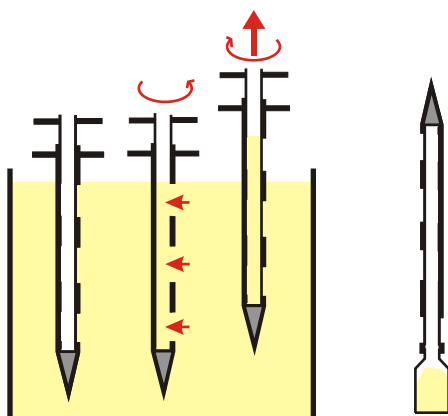

Emptying from sampler with a bottle adapter

- (A) Tip (screws into tube)
- (B) Outer Tube
- (C) Inner Tube
- (D) Bottle Adapter

Cleaning

The sampler should be stripped down to its component parts and then cleaned according to the usual cleaning methods that are employed for items such as general dispensing ware, tablet punches etc.

Ensure that the all component parts are thoroughly dried after washing.



Hand Wash ✓	Washing Machine ✓	Ultra-sonic bath ✓	Autoclave 121°C ✓
-------------	-------------------	--------------------	-------------------

IMPORTANT: ENSURE SAMPLER IS CLEANED THOROUGHLY BEFORE INITIAL USE

Whilst every care has been made during the construction of your sampler it should be noted that your new sampler was fabricated and polished in a metal working factory. Ensure that the sampler is thoroughly cleaned according to your normal cleaning procedures and that any polishing waxes have been completely removed before the sampler is used for the first time.

If you have any questions regarding the use of this device please contact Sampling