

UD Cohesive

General

The UD Cohesive is ideal for sampling unit dose samples of cohesive powders.

Operation



1. Select tip volume required
2. Insert the sampler into the product.
3. At the required depth push down the handle and rotate it through 180°.
4. Pull up sampler several millimetres (to fill the cell), then rotate handle 180° (to lock cell in closed position).
5. Remove sampler



Tip in open position



Tip in closed position

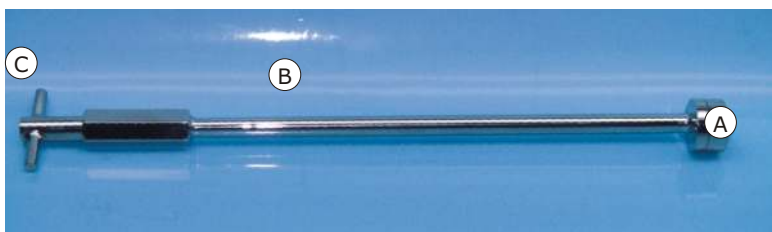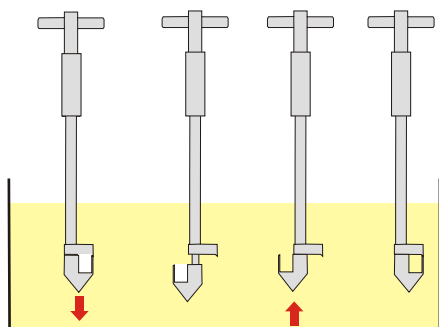

- (A) Tip
- (B) Outer Tube
- (C) Inner rod and handle

Cleaning

The sampler should be stripped down to its component parts and then cleaned according to the usual cleaning methods that are employed for items such as general dispensing ware, tablet punches etc.

Ensure that the all component parts are thoroughly dried after washing.

Hand Wash ✓	Washing Machine ✓	Ultra-sonic bath ✓	Autoclave 121°C ✓
-------------	-------------------	--------------------	-------------------

IMPORTANT: ENSURE SAMPLER IS CLEANED THOROUGHLY BEFORE INITIAL USE

Whilst every care has been made during the construction of your sampler it should be noted that your new sampler was fabricated and polished in a metal working factory. Ensure that the sampler is thoroughly cleaned according to your normal cleaning procedures and that any polishing waxes have been completely removed before the sampler is used for the first time.

If you have any questions regarding the use of this device please contact Sampling