

Disposable Powder Lance

General

The Disposable Powder Lance is ideal for taking a cross sectional sample through a bulk powder.

Assembled & Packed in a Cleanroom	✓
Individually Bagged	✓
FDA Conforming Materials	✓
BSE/TSE Free	✓
Full Batch Traceability	✓
ATEX Rated	✓
Available Sterile (gamma irradiated)	✓




End Tips

The Powder Lance is available with an open tip or with an End Tip.

Without End Tip - ideal for use with sticky, cohesive powders

With an End Tip - use when sampling free flowing powders

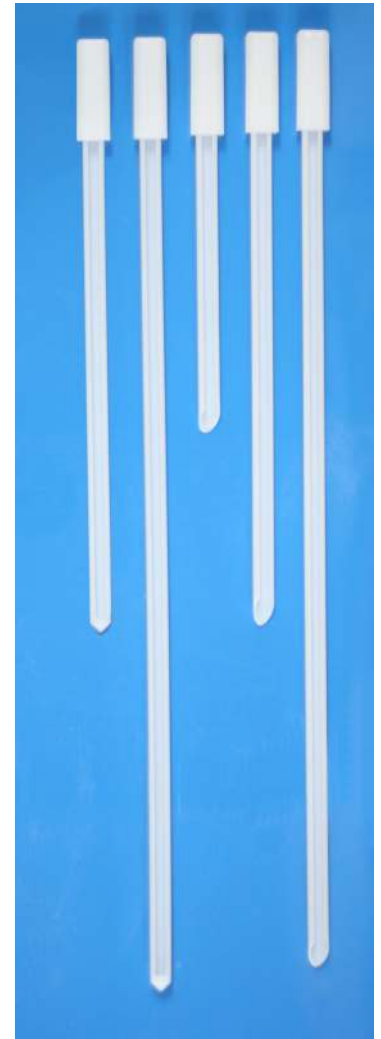

Operation

The Disposable Powder Lance is quick and easy to use:

1. Push the Disposable Powder Lance into the product and then withdraw
2. Deposit the sample into a suitable container
3. Place the used sampler into its plastic bag

Cleaning

1. This is a single use device - do not clean
2. Do not re-use
3. Do not remove the top or bottom tapered fittings - they are welded in place and so can will not be secure when replaced

If you have any questions regarding the use of this device please contact Sampling Systems